



KEURIG[®]
COMMERCIAL

Let's get
brewing.

K-1500[™]
Quick Start Guide

IMPORTANT SAFEGUARDS - READ ALL INSTRUCTIONS BEFORE USING



When using electrical appliances, basic safety precautions should be followed, including the following:

1. Do not touch hot surfaces. Use handles and knobs when available.
2. This appliance must be properly installed and located in accordance with these instructions before it is used.
3. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electrical shock, or injury to persons.
4. Do not place on or near a hot gas or electric burner, or in a heated oven.
5. Do not use outdoors.
6. To protect against fire, electric shock, and injury do not immerse cords, plugs, or the appliance in water or any other liquid.
7. Do not fill the water reservoir above the MAX FILL line.
8. Use only water in this appliance! Do not put any other liquids or foods in the water reservoir except as instructed in the cleaning instructions in the Use & Care Guide.
9. Turn off and unplug the brewer before cleaning or maintenance. Allow to cool before putting on or taking off parts and before cleaning the appliance.
10. For best operation, plug the appliance into its own electrical outlet on a dedicated circuit to prevent flickering of lights, blowing of fuses, or tripping a circuit breaker.
11. Do not operate any appliance with a damaged power cord or plug, or after the appliance malfunctions or is damaged in any manner. Contact Keurig® Customer Service or a Keurig® Authorized Distributor to report any malfunction or of damage to the brewer.
12. Do not let the power cord hang over the edge of the table or counter, or touch hot surfaces.
13. To disconnect, press the power button on the brewer to "OFF" status and then remove the plug from the wall outlet.
14. Close supervision is necessary when any appliance is used by or near children 12 years or younger.
15. Do not lift the brewer handle while brewing is in progress.
16. Always keep the water reservoir lid on the water reservoir unless you are refilling it.
17. This appliance is equipped with a power cord having a grounding wire with a grounding plug. The appliance must be grounded using a 3-hole properly grounded outlet. In the event of an electrical short circuit, grounding reduces the risk of electrical shock.
18. If the outlet is a standard 2-prong wall outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.
19. Do not, under any circumstances, cut or remove the third (ground) prong from the power cord or use an adapter.
20. Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.
21. Do not use the appliance for other than its intended use.
22. Additional cleaning and care instructions can be found at Commercial.Keurig.com (or Keurig.ca/business_solutions for Canada).

CAUTIONS:

1. There are sharp needles that puncture pods, located above the pod holder and in the bottom of the pod holder. To avoid risk of injury, do not put your fingers in the pod holder assembly.
2. There is extremely hot water in the pod holder during the brew process. To avoid risk of injury, do not lift the handle or open the pod holder assembly during the brewing process.
3. Always keep the brewer in its upright position to avoid potential injury and/or damage to your brewer.
4. Very hot liquid. Adult supervision required.

Refer to the Use & Care Guide for recommended cleaning and maintenance of the appliance.

WARNINGS:

1. DO NOT permit children to use the brewer unless there is adult supervision. Brewer dispenses very hot water.
2. Keep all plastic bags away from children.
3. HOT COCOA/OTHER NON-COFFEE PODS: Immediately

after using a hot cocoa/ other pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.

SHORT CORD INSTRUCTIONS:

A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If an extension cord is used, (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, (2) the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally, and (3) the extension cord must include a 3-prong grounding plug.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD & COMMERCIAL USE ONLY


WARNING

RISK OF FIRE OR
ELECTRIC
SHOCK
DO NOT OPEN



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THE BOTTOM COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL

Before You Brew

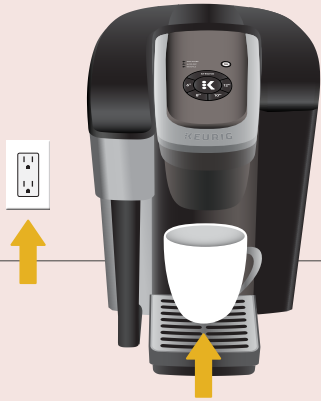

1 Plug & Place

Remove packing tape from brewer and plug into a grounded outlet.

Place a large mug (12oz minimum) on the drip tray plate.




2 Rinse & Fill

Remove the water reservoir lid, then lift the reservoir straight up to remove it.

Rinse reservoir with fresh water and fill to the MAX fill line.

Replace water reservoir, making sure the lock tab engages with the brewer. Replace lid.

NOTE: Do not use distilled water.

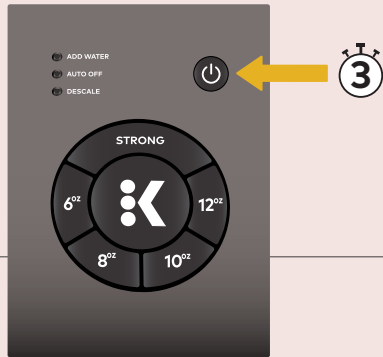

3 Power On

Press power button — the white power light will illuminate.

The brewer will automatically begin heating the water. This will take about 3 minutes. Once the heating sound stops, the brewer is ready.



4 Cleansing Brew

Do not insert a K-Cup® pod. Open and close the bail. The brew sizes and STRONG buttons will blink. Press the 8oz button and then the Brew button to start a cleansing brew.

Pour the hot water into the sink.

The one-time setup process is now complete and you are ready to brew!

NOTE: Between brew cycles, the brewer may take about a minute to reheat.



Brew Your First Cup



5 Place Mug & Insert

Place a mug on the drip tray plate. If using a travel mug, remove the drip tray and place the mug on the drip tray base. Lift the bail and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.

Do not remove the foil lid on the K-Cup® pod.

High Altitude Brewing: When brewing in higher altitudes (5,000 feet), please enable the High Altitude Brewing Mode on your brewer and follow the High Altitude Brewing instructions* listed under the Brewer Features section.



6 Brew & Enjoy!

Select your brew size — for bolder coffee, press the STRONG button before your brew size. After selecting your brew size the BREW button will flash. Press the brew button to begin brewing your beverage. The selected brew size, brew button, and STRONG button, if selected, will remain illuminated while brewing — about 1 minute. The brewer will be ready to brew another cup in about a minute.

CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process.

Brewer Features

Strong Brew increases the strength and bold taste of your coffee's flavor. For bolder coffee, press the **STRONG** button and select your brew size.

Smart Start heats then brews in one simple process. No need to wait for the brewer to heat before selecting your brew size. Power on your brewer, place mug, insert a K-Cup® pod, and lower the handle. Then, select your brew size and press the brew button. The brewer will heat, then automatically begin brewing.

Auto Off automatically turns your brewer off 2 hours after the last brew for energy savings. To disable, power the brewer off while it is still plugged in. Press down on the **STRONG** and **10oz** buttons at the same time and hold for 3 seconds until the **AUTO OFF** Indicator is turned off. Repeat the same steps to enable the feature.

Commercial Rating ensures that the K-1500™ brewer will stand-up to the demands of your coffee station. Enjoy the convenience of a modern touch-button interface, an industrial (96oz) water reservoir - with easy-grip handle, and a drainable internal hot water tank.

High Altitude Brewing Instructions*: **1.** Power the brewer off while it is plugged in. **2.** Press and hold the **STRONG** and **8oz** buttons for 3 seconds – both lights will blink 3 times to confirm that the High Altitude Brewing Mode has been enabled. **3.** While holding the brewer bail

up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle.


Disable High Altitude Brewing: **1.** Power the brewer off while it is plugged in. **2.** Press and hold the **STRONG** and **8oz** buttons until the lights are no longer illuminated.

Caring for your Brewer

Regular cleaning keeps your brewer running smoothly. Always be sure to turn off and unplug your brewer before cleaning. For detailed brewer cleaning instructions and videos visit commercial.keurig.com (or keurig.ca/business_solutions for Canada). Beyond these recommended cleaning instructions, this brewer is not user-serviceable. For service, please refer to the Warranty section.

Water Reservoir

The water reservoir lid and water reservoir should be cleaned periodically with a damp, soapy, non-abrasive cloth. Rinse the reservoir thoroughly after cleaning. This will ensure that no cleaning solutions remain in the area, as they may contaminate the water supply. After rinsing, fill the reservoir with clean water and return it to the brewer. Do not dry the inside of the water reservoir with a cloth as lint may remain.

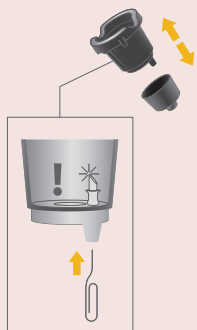

Exit Needle

Remove the pod holder assembly and detach the funnel. Locate the exit needle on the inside bottom of the K-Cup® pod holder. Insert a straightened paper clip into the exit needle to loosen any coffee grounds.

Entrance Needle

Lift the brewer bail and locate the entrance needle on the underside of the brewer head. To clean both holes in the needle, hold the brewer handle in the upward position and with your other hand, carefully insert a straightened paper clip into both holes. Gently move it around to loosen any coffee grounds. Lower the handle completely and run two water-only brew cycles. Do not insert a K-Cup® pod.

CAUTION: There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, do not put your fingers in the K-Cup® pod holder.

Warranty

Limited One-Year Warranty

Keurig Green Mountain, Inc. warrants to the original purchaser that its brewer will be free of defects in materials or workmanship under normal use for one year from the date of purchase. Keurig, a Keurig Authorized Distributor or Service Agent will, at their option, repair or replace a defective brewer or brewer parts under this warranty without charge upon its receipt of proof of the date of purchase. If a replacement brewer is necessary to service this warranty, the replacement brewer may be new or reconditioned. If a replacement brewer or parts are sent, a new limited one-year warranty will be applied to the replacement brewer or parts. This warranty only applies to brewers operated in the United States and Canada. This warranty gives the original purchaser specific legal rights, and you may also have other rights that vary from state to state and, in the case of Canada, from province to province. If you obtained this brewer through sale or rental from a Keurig Authorized Distributor, you may also want to refer to your distributor's warranty policies. Only the use of Keurig® K-Cup® brand pods and accessories will guarantee the proper functioning and lifetime of Keurig® K-Cup® brewer. Any damage to or malfunction of your brewer resulting from the use of non Keurig® K-Cup® brand pods and accessories may not be covered by this warranty or may result in a service fee if the damage or malfunction is determined to be caused by such use.

What is not covered by the Limited Warranty?

THIS WARRANTY DOES NOT COVER CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND DOES NOT COVER INCIDENTAL COSTS AND EXPENSES RESULTING FROM ANY BREACH OF THIS WARRANTY, EVEN IF FORESEEABLE.

Some states or provinces do not allow the exclusion or limitations of incidental or consequential damages, so the above limitation or exclusion may not apply to you depending on the state or province of purchase. Nor does this warranty cover damages caused by use of non Keurig® K-Cup® brand pods or accessories, services performed by anyone other than Keurig or its authorized service providers, use of parts other than genuine Keurig parts, or external causes such as abuse, misuse, inappropriate power supply, or acts of God.

Other Limitations

THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER EXPRESS WARRANTY, WHETHER WRITTEN OR ORAL. IN ADDITION, KEURIG HEREBY SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES WITH RESPECT TO YOUR K-1500 BREWER, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

Some states or provinces do not allow disclaimers of such implied warranties or limitations on how long

an implied warranty lasts, so the above limitation may not apply to you depending on the state or the province of purchase.

How do you obtain warranty service?

Keurig® brewers are high-quality appliances and, with proper care, are intended to provide years of satisfying performance. However, should the need arise for warranty servicing; simply call your Keurig Authorized Distributor (KAD) who originally sold you the brewer or your Keurig Authorized Service Provider (KASP) for full support. To be reconnected with your KAD or KASP, please call Keurig at 1.888.287.2739 ex.5. If in Canada, please call: 1.800.361.5628. Keurig Green Mountain, Inc. 33 Coffee Lane Waterbury, VT 05676

Authentic, full-flavored coffeehouse taste.

One perfect cup at a time, anytime.

Have questions? We're here to help.
Visit commercial.keurig.com for troubleshooting
videos, maintenance recommendations,
and the full Use & Care Guide.

Still need help?
Give us a call at 1-866-901-BREW (2739)